


FIG.1

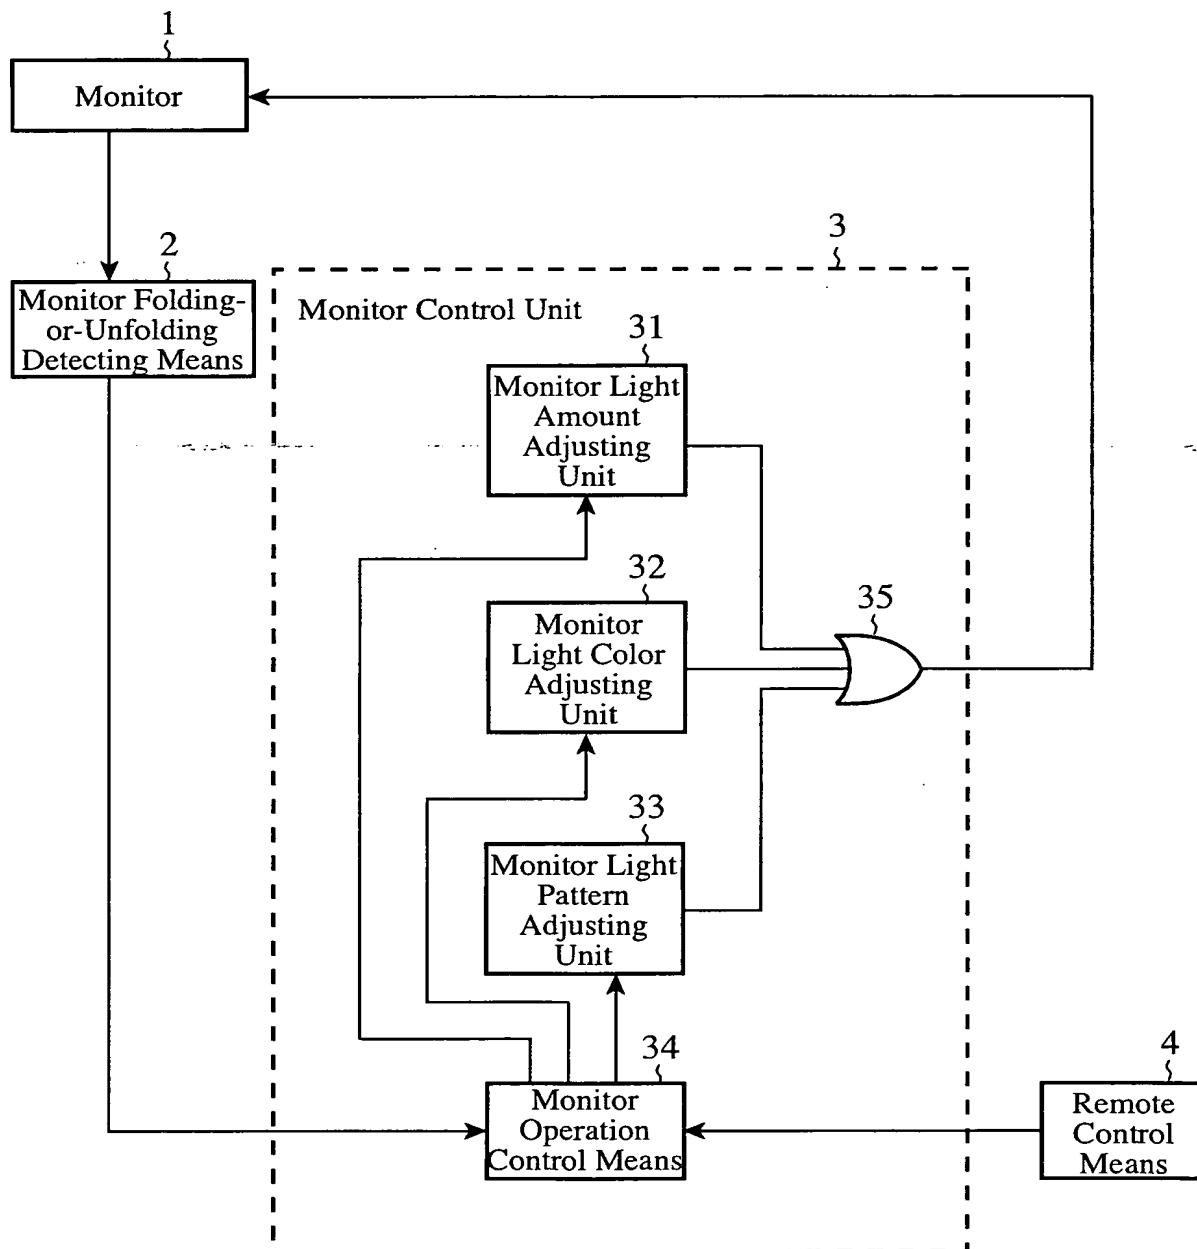

2/11

FIG.2


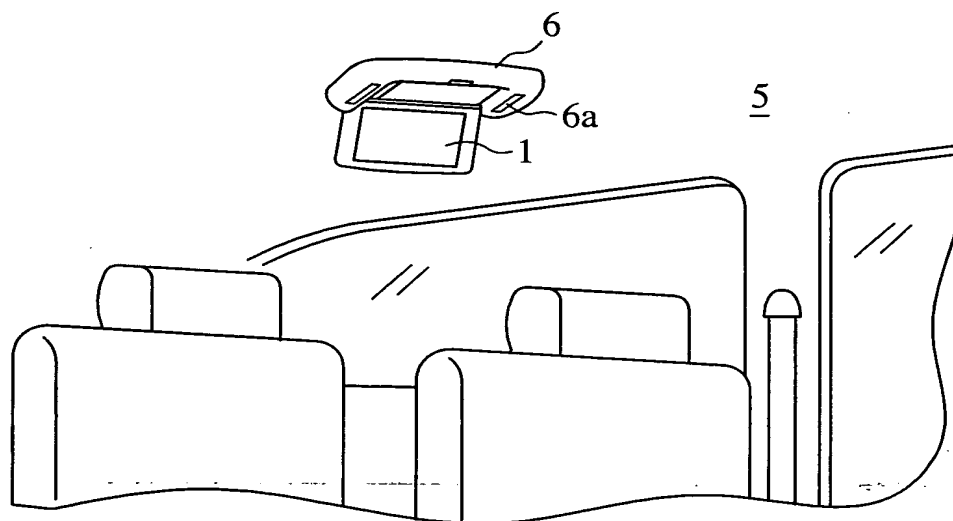


FIG.3

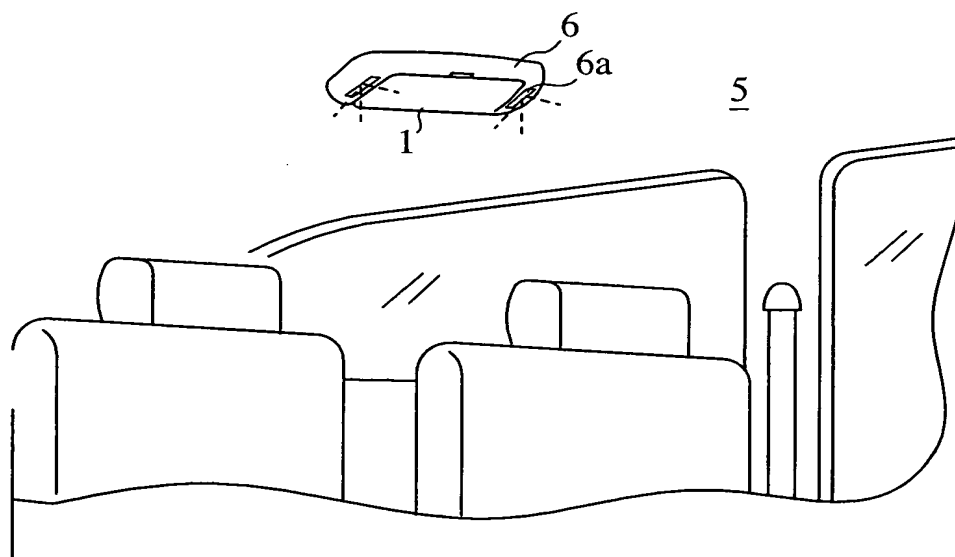

3/11

FIG.4


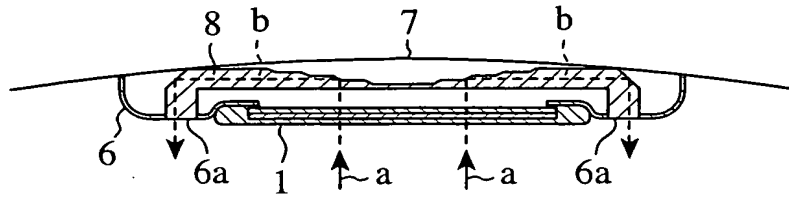


FIG.5

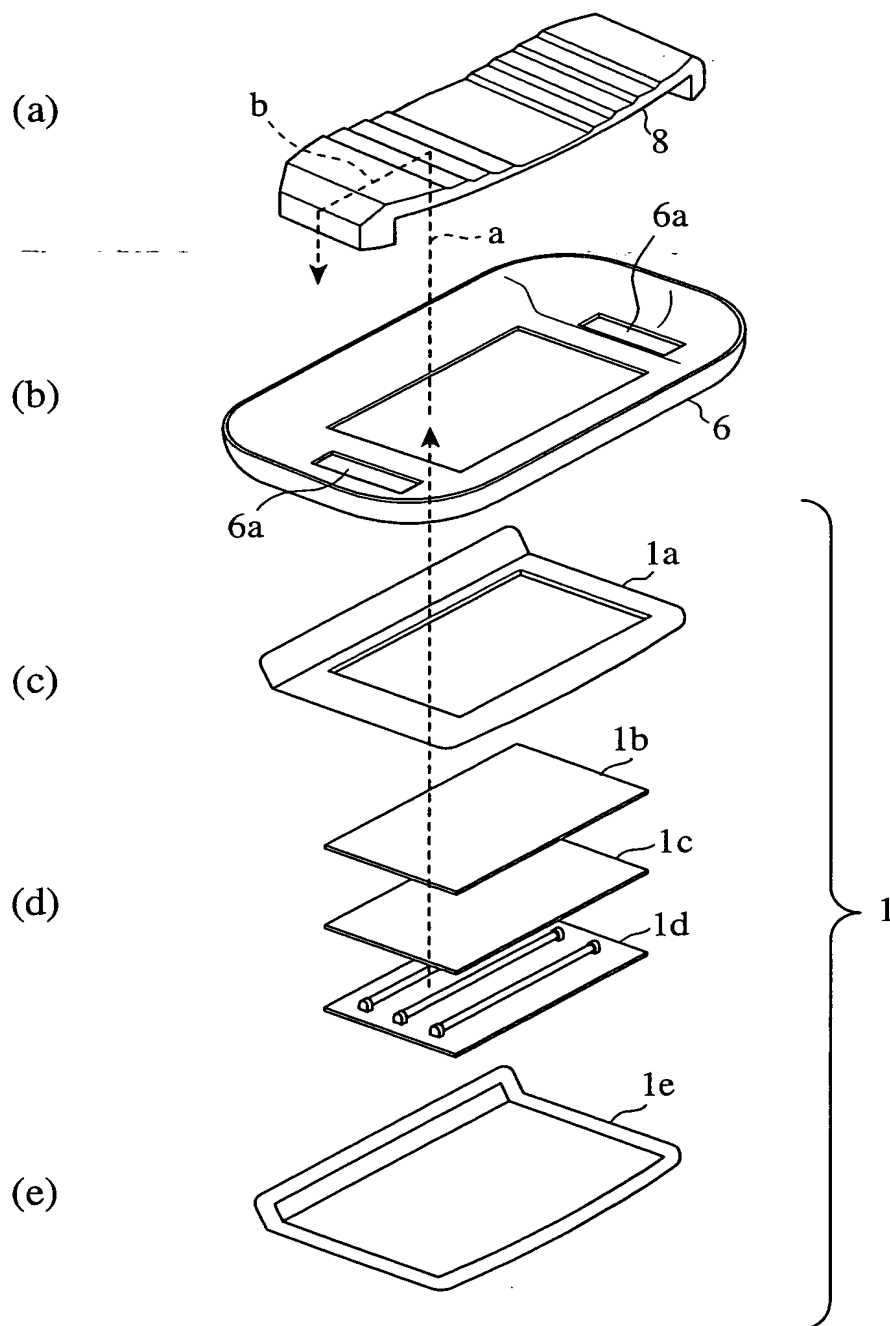

4/11

FIG.6


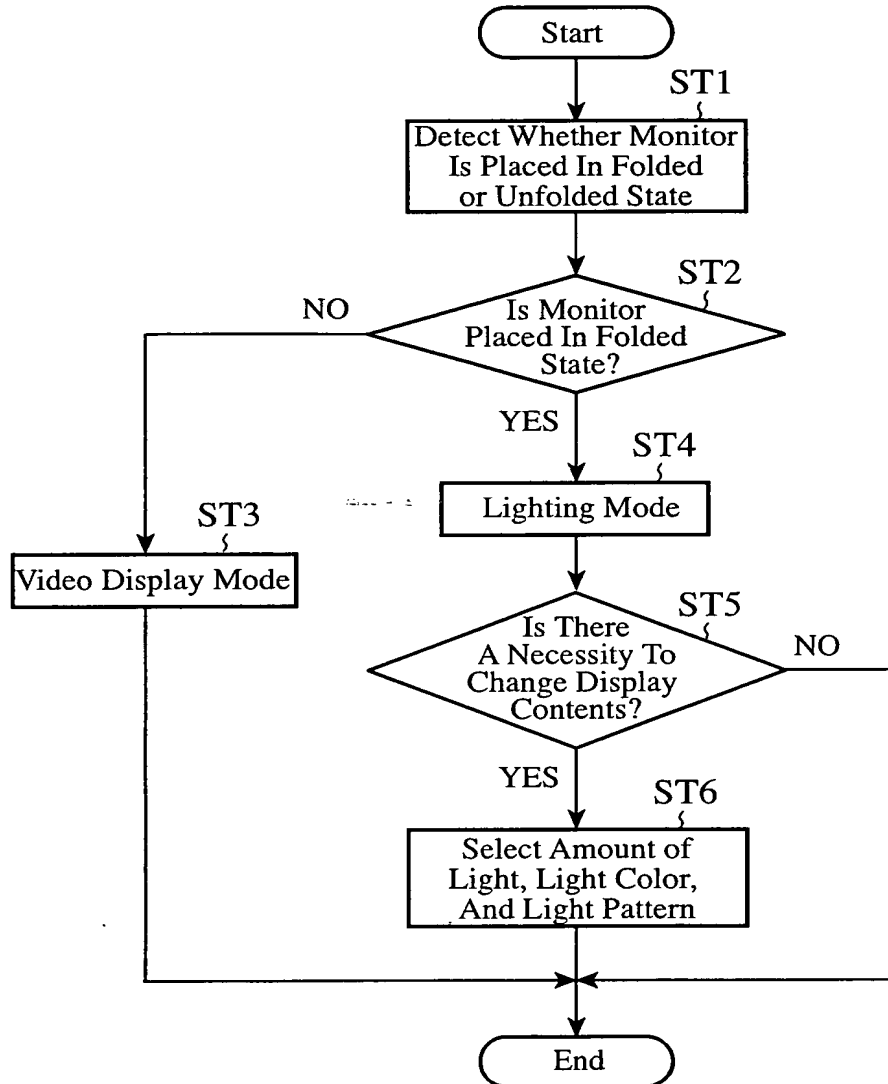


FIG.7

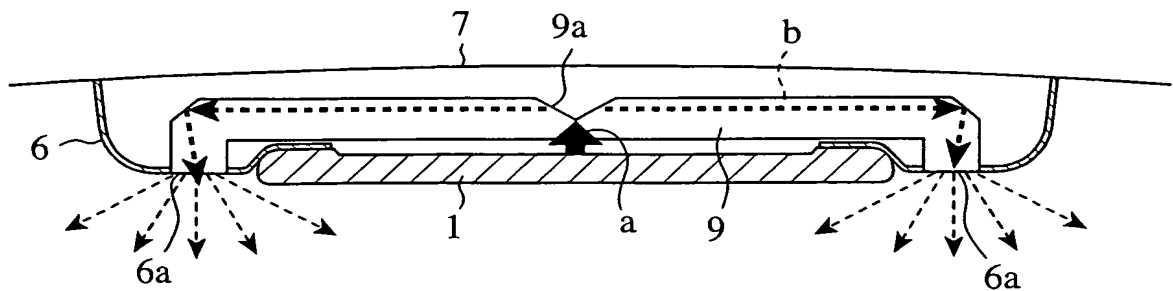

5/11

FIG.8



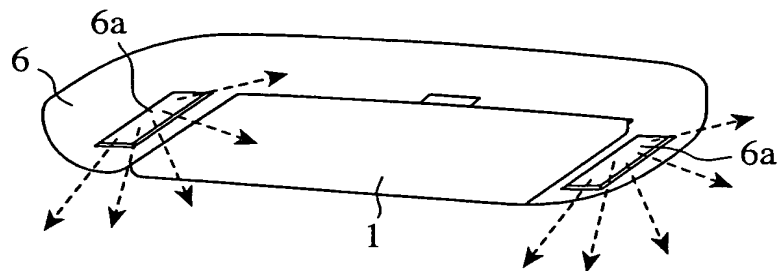


FIG.9

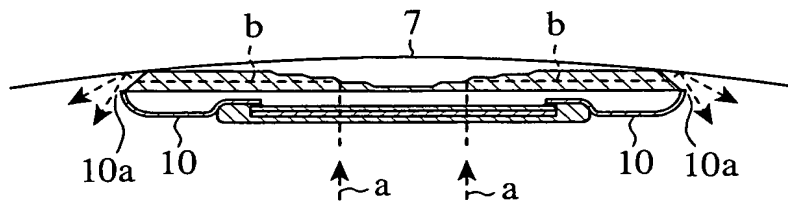

6/11

FIG.10

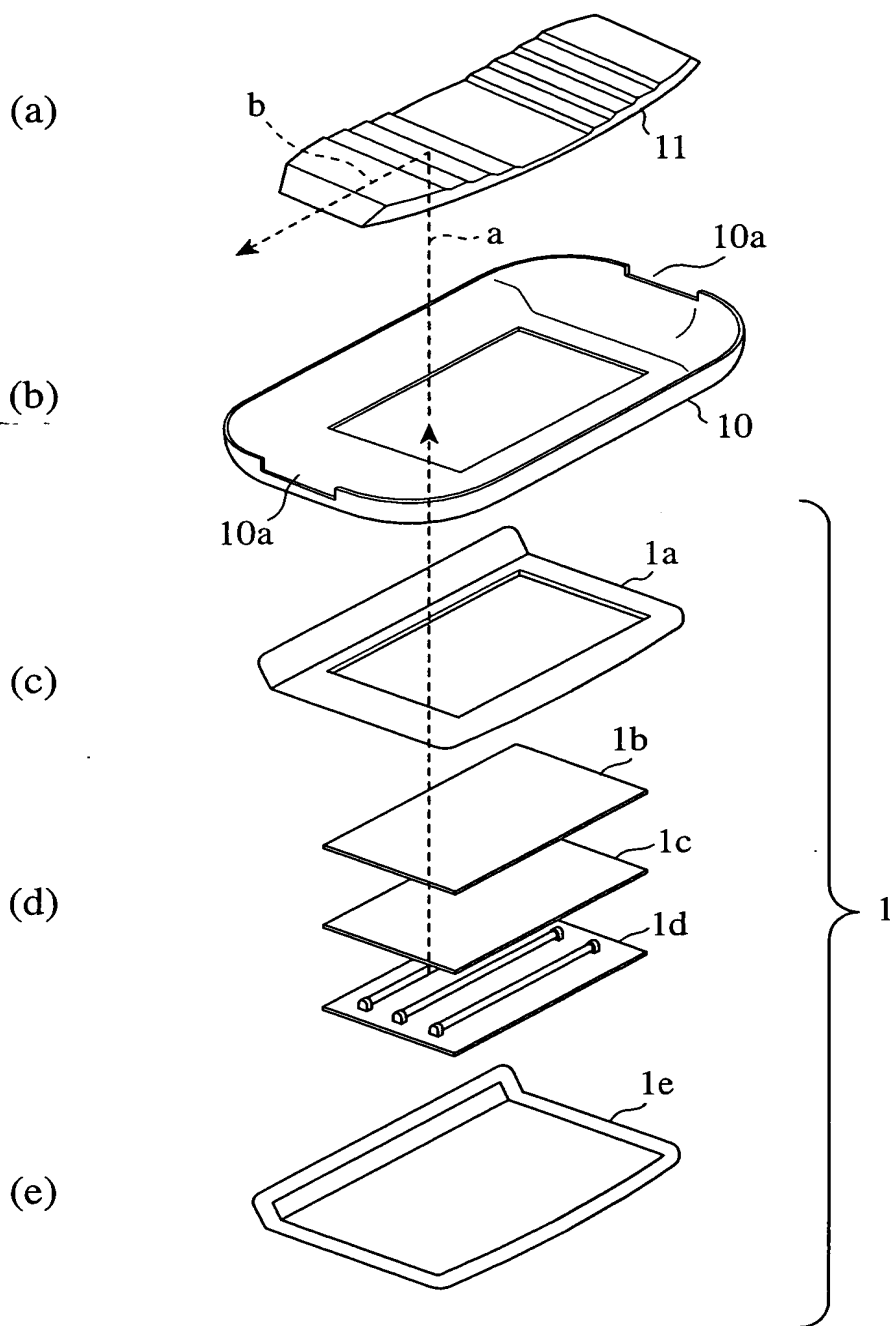

7/11

FIG.11

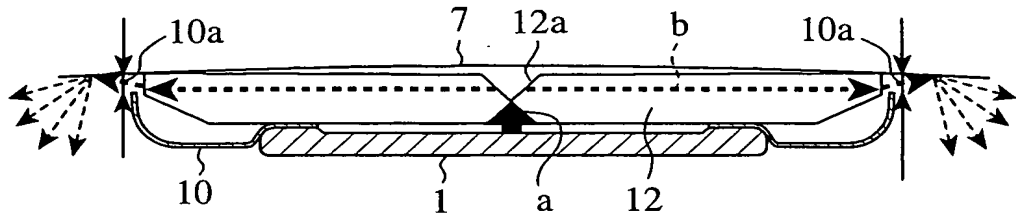


FIG. 12



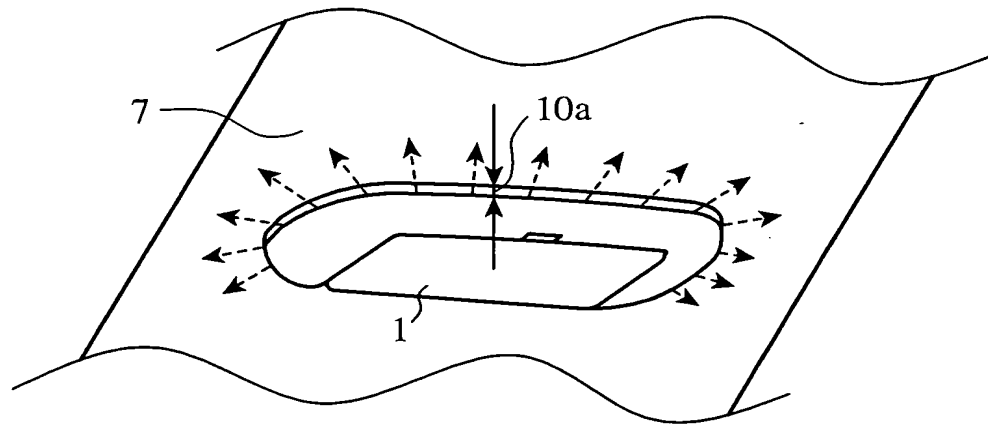


FIG.13

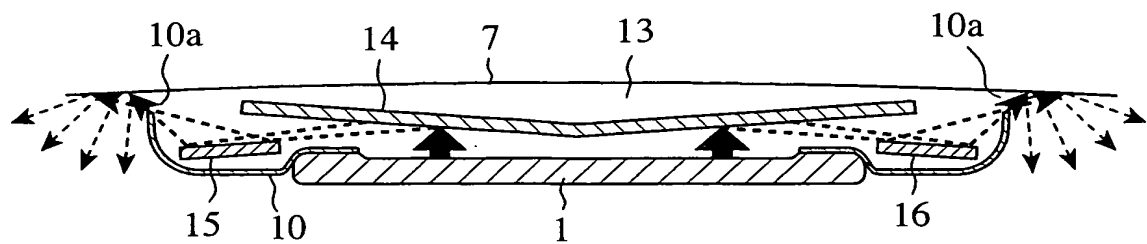

8/11

FIG.14

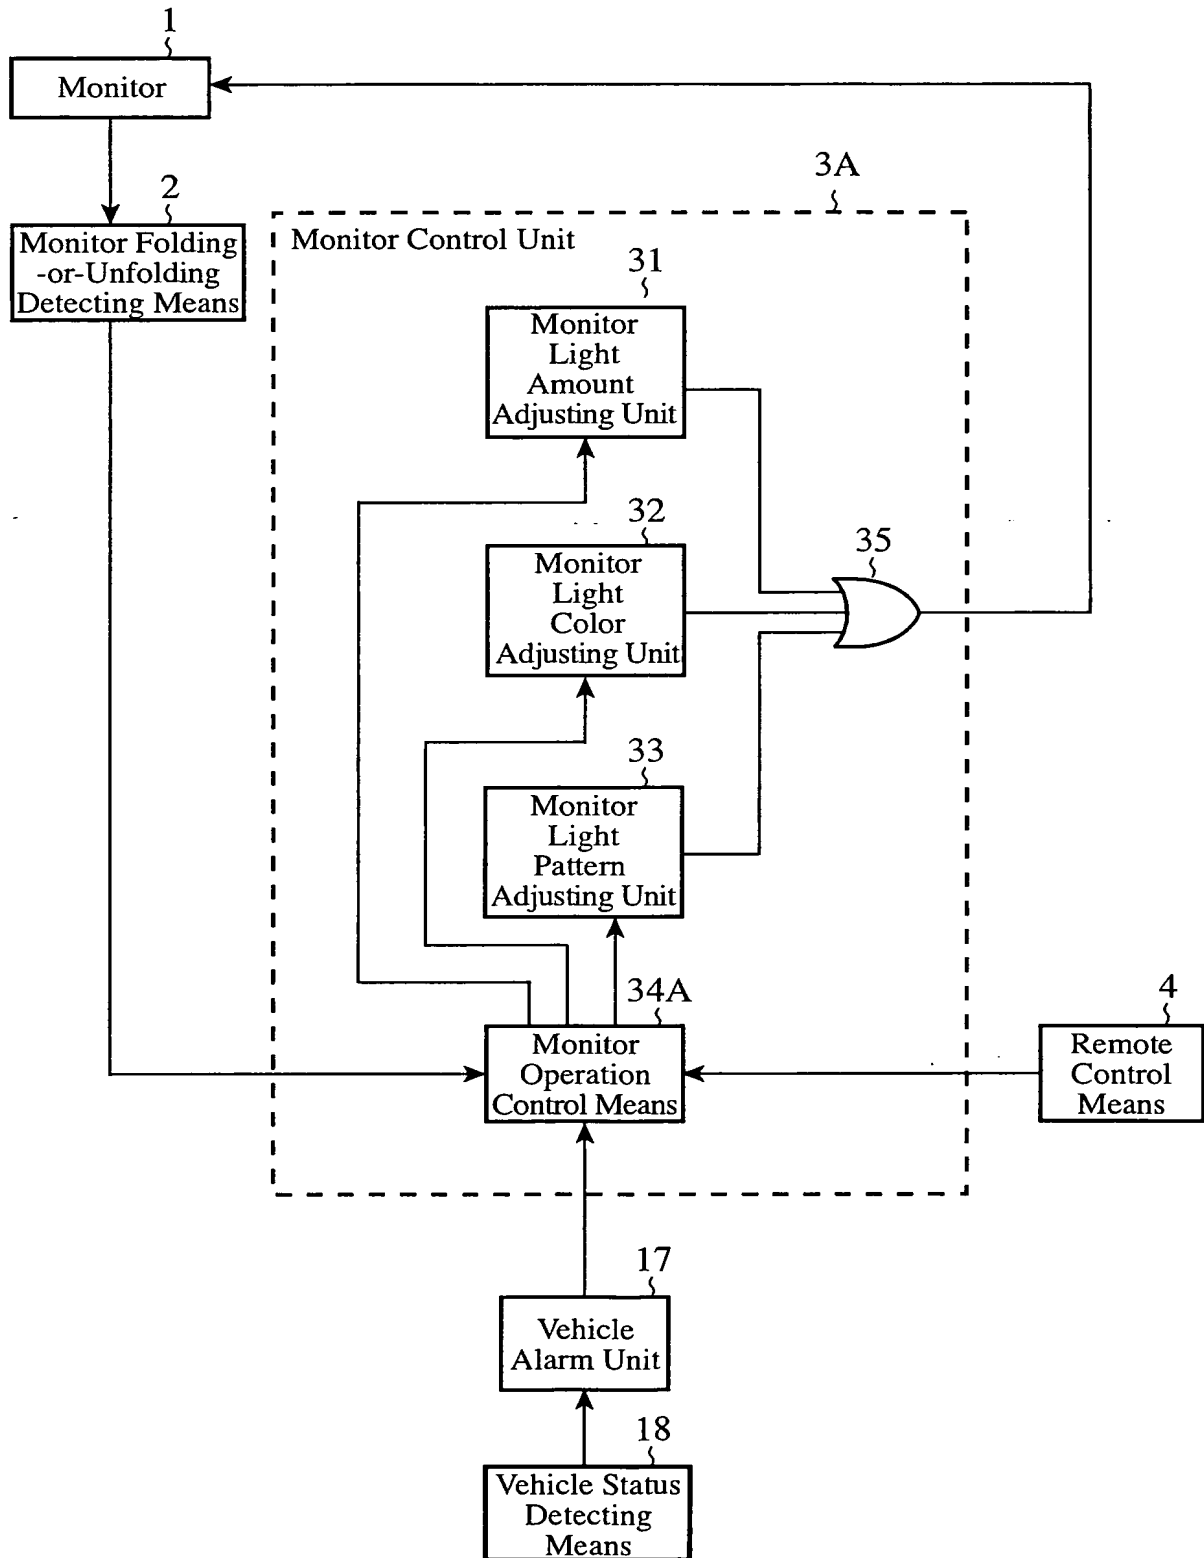

9/11

FIG.15

| | | Display Contents | | |
|-------|---|--|------------------------|----------------------------|
| | | When Monitor Is Folded | | |
| | | Video Display Mode | Lighting Mode | Alarm Mode |
| Alarm | No Alarm | Monitor Is Not Switched On | Monitor Is Switched On | Monitor Is Not Switched On |
| | Immobilizer (Antitheft Device) | Monitor Emits Red Light and Blinks (At Intervals of 0.5 Seconds) Monitor Is Switched Off When Immobilizer Is Released | | |
| | Warning Indicating That Door Is Not Completely Closed | Monitor Emits Yellow Light Monitor Is Switched Off When Door Is Closed | | |
| | Seat Belt Wearing Warning | Monitor Emits Orange Light and Blinks (At Intervals of 1 Second for 10 Seconds -> At Intervals of 0.5 Seconds) Monitor Is Switched Off When Seat Belt Is Worn | | |
| | Remaining Oil Amount Warning | Monitor Emits Green Light and Blinks (At Intervals of 2 Seconds) Monitor Is Switched Off When Alarm Unit Is Released | | |
| | Remaining Fuel Amount Warning | Monitor Emits Blue Light and Blinks (At Intervals of 2 Seconds) Monitor Is Switched Off When Alarm Unit Is Released | | |
| | Remaining Battery Charged Capacity Warning | Monitor Emits White Light and Blinks (At Intervals of 2 Seconds) Monitor Is Switched Off When Alarm Unit Is Released | | |
| | Simultaneous Occurrence of Two or More Alarms | Generate Alarm Displays Corresponding To Alarms One By One (Switch Among Alarm Displays at Intervals of 10 Seconds) Generation of Each Alarm Display Is Switched Off When Corresponding Alarm Is Released | | |

10/11

FIG.16

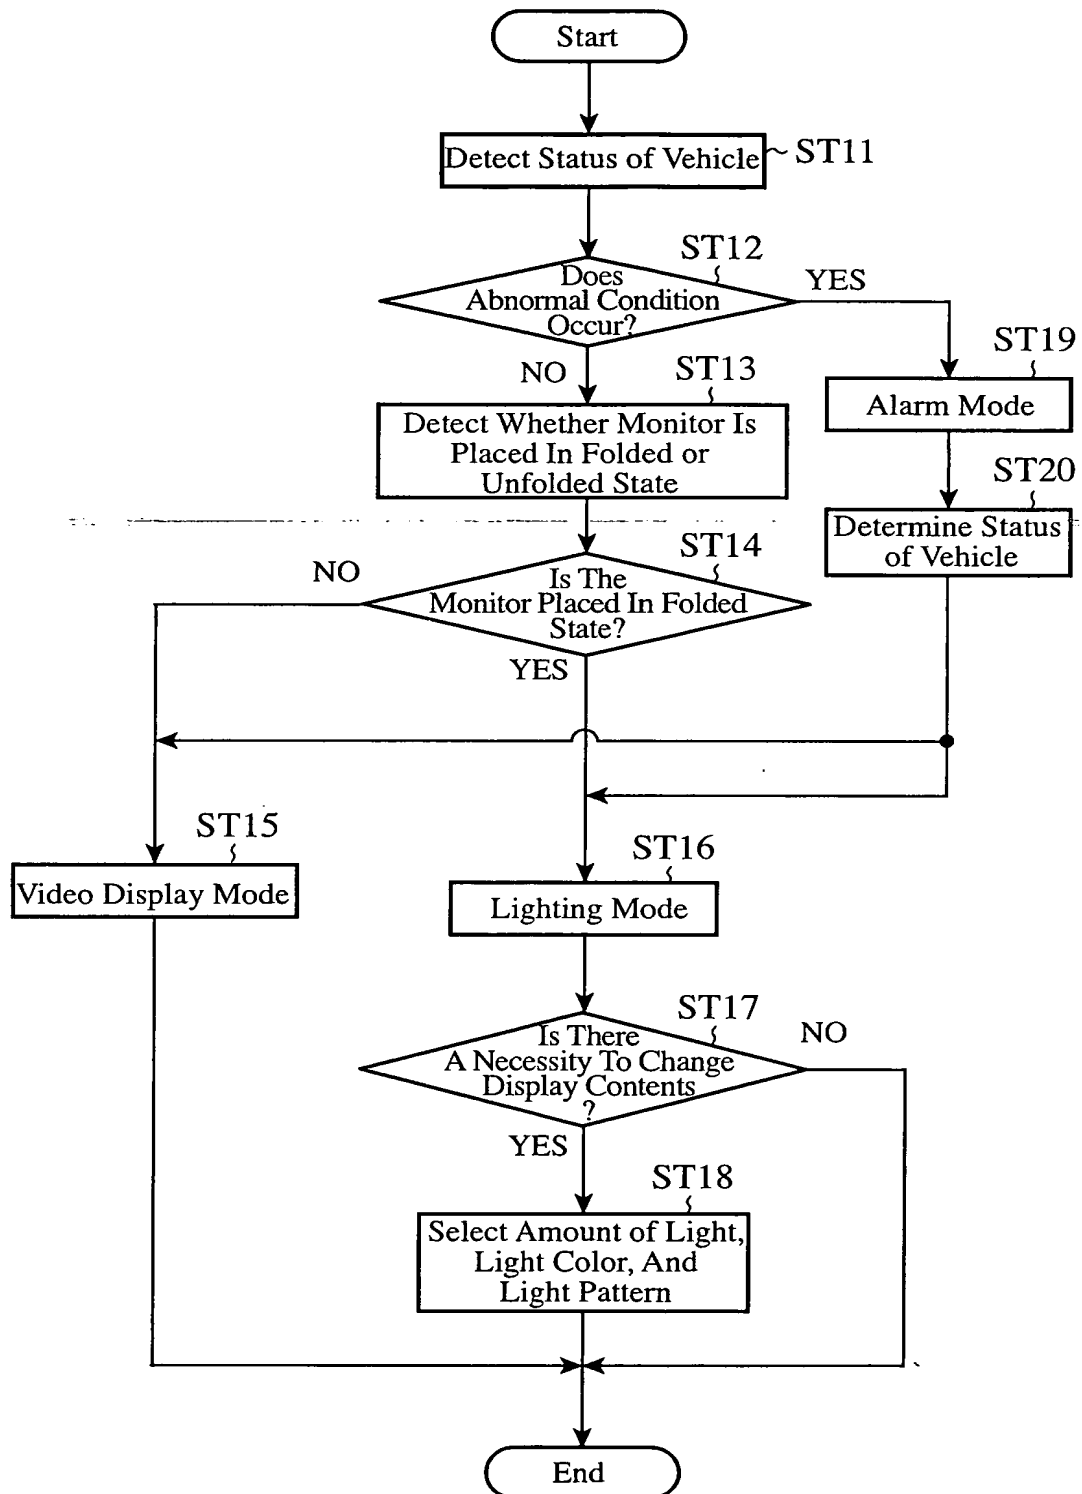


FIG.17

